

## E5.18 Internal lighting

### Removing the cabin light


➤ Disconnect the battery (🔌 F2.01).



- Using a suitable tool, prise off the trim **(A)** and remove.



- Undo the three screws indicated fastening the cabin light **(B)**.
- Using a suitable tool, prise out the cabin light **(B)** from its seat.

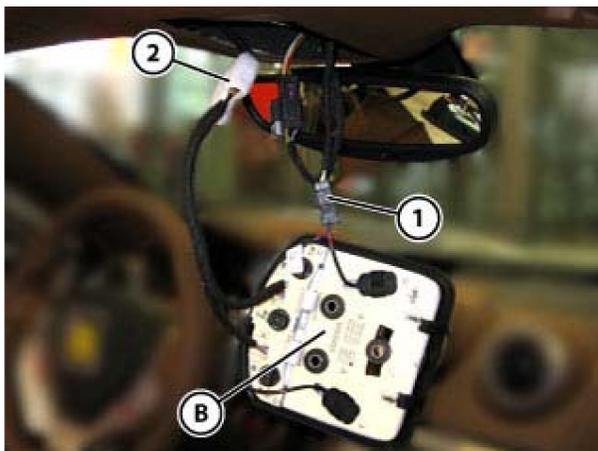


- Disconnect the connector **(1)**.
- Remove the protective cover and disconnect the connector **(2)**.
- Remove the cabin light **(B)** from the vehicle.

## Refitting the cabin light



Tightening torque		Nm	Class
Fastening cabin light	Screw	4 Nm	C

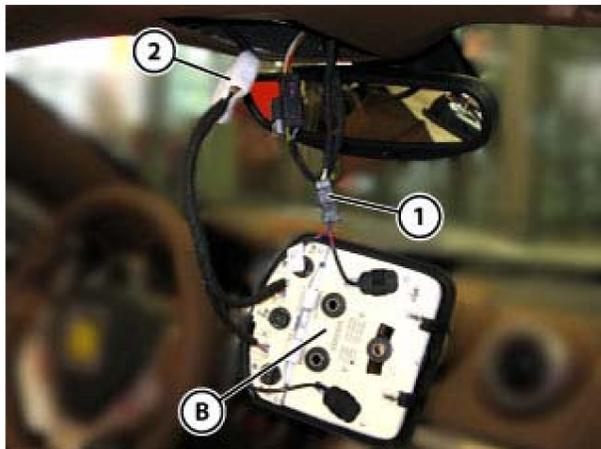

- Place the cabin light **(B)** in the vehicle.
- Connect the connector **(2)** and refit the respective protective cover.
- Connect the connector **(1)**.



- Fit the cabin light **(B)** in the relative seat, pressing until it snaps audibly into place.
- Tighten the three screws indicated fastening the cabin light **(B)**.



Tightening torque		Nm	Class
Screw		4 Nm	C



- Fit the cover **(A)** in its respective seat, pressing until it snaps audibly into place.

➤ Connect the battery (🔋 F2.01).