

Ferrari 488/Cali T HVAC Panel Disassembly





Tools needed:

Regular Phillips Screwdriver
Small Flat Head Screwdriver

Remove the six screws from the rear of the panel




Pop the two tabs on the backside with a flat screwdriver




Remove the back cover, revealing the electronics board



Remove the four screws from the board Mark and keep all screws separate, they only fit back to where you removed them from

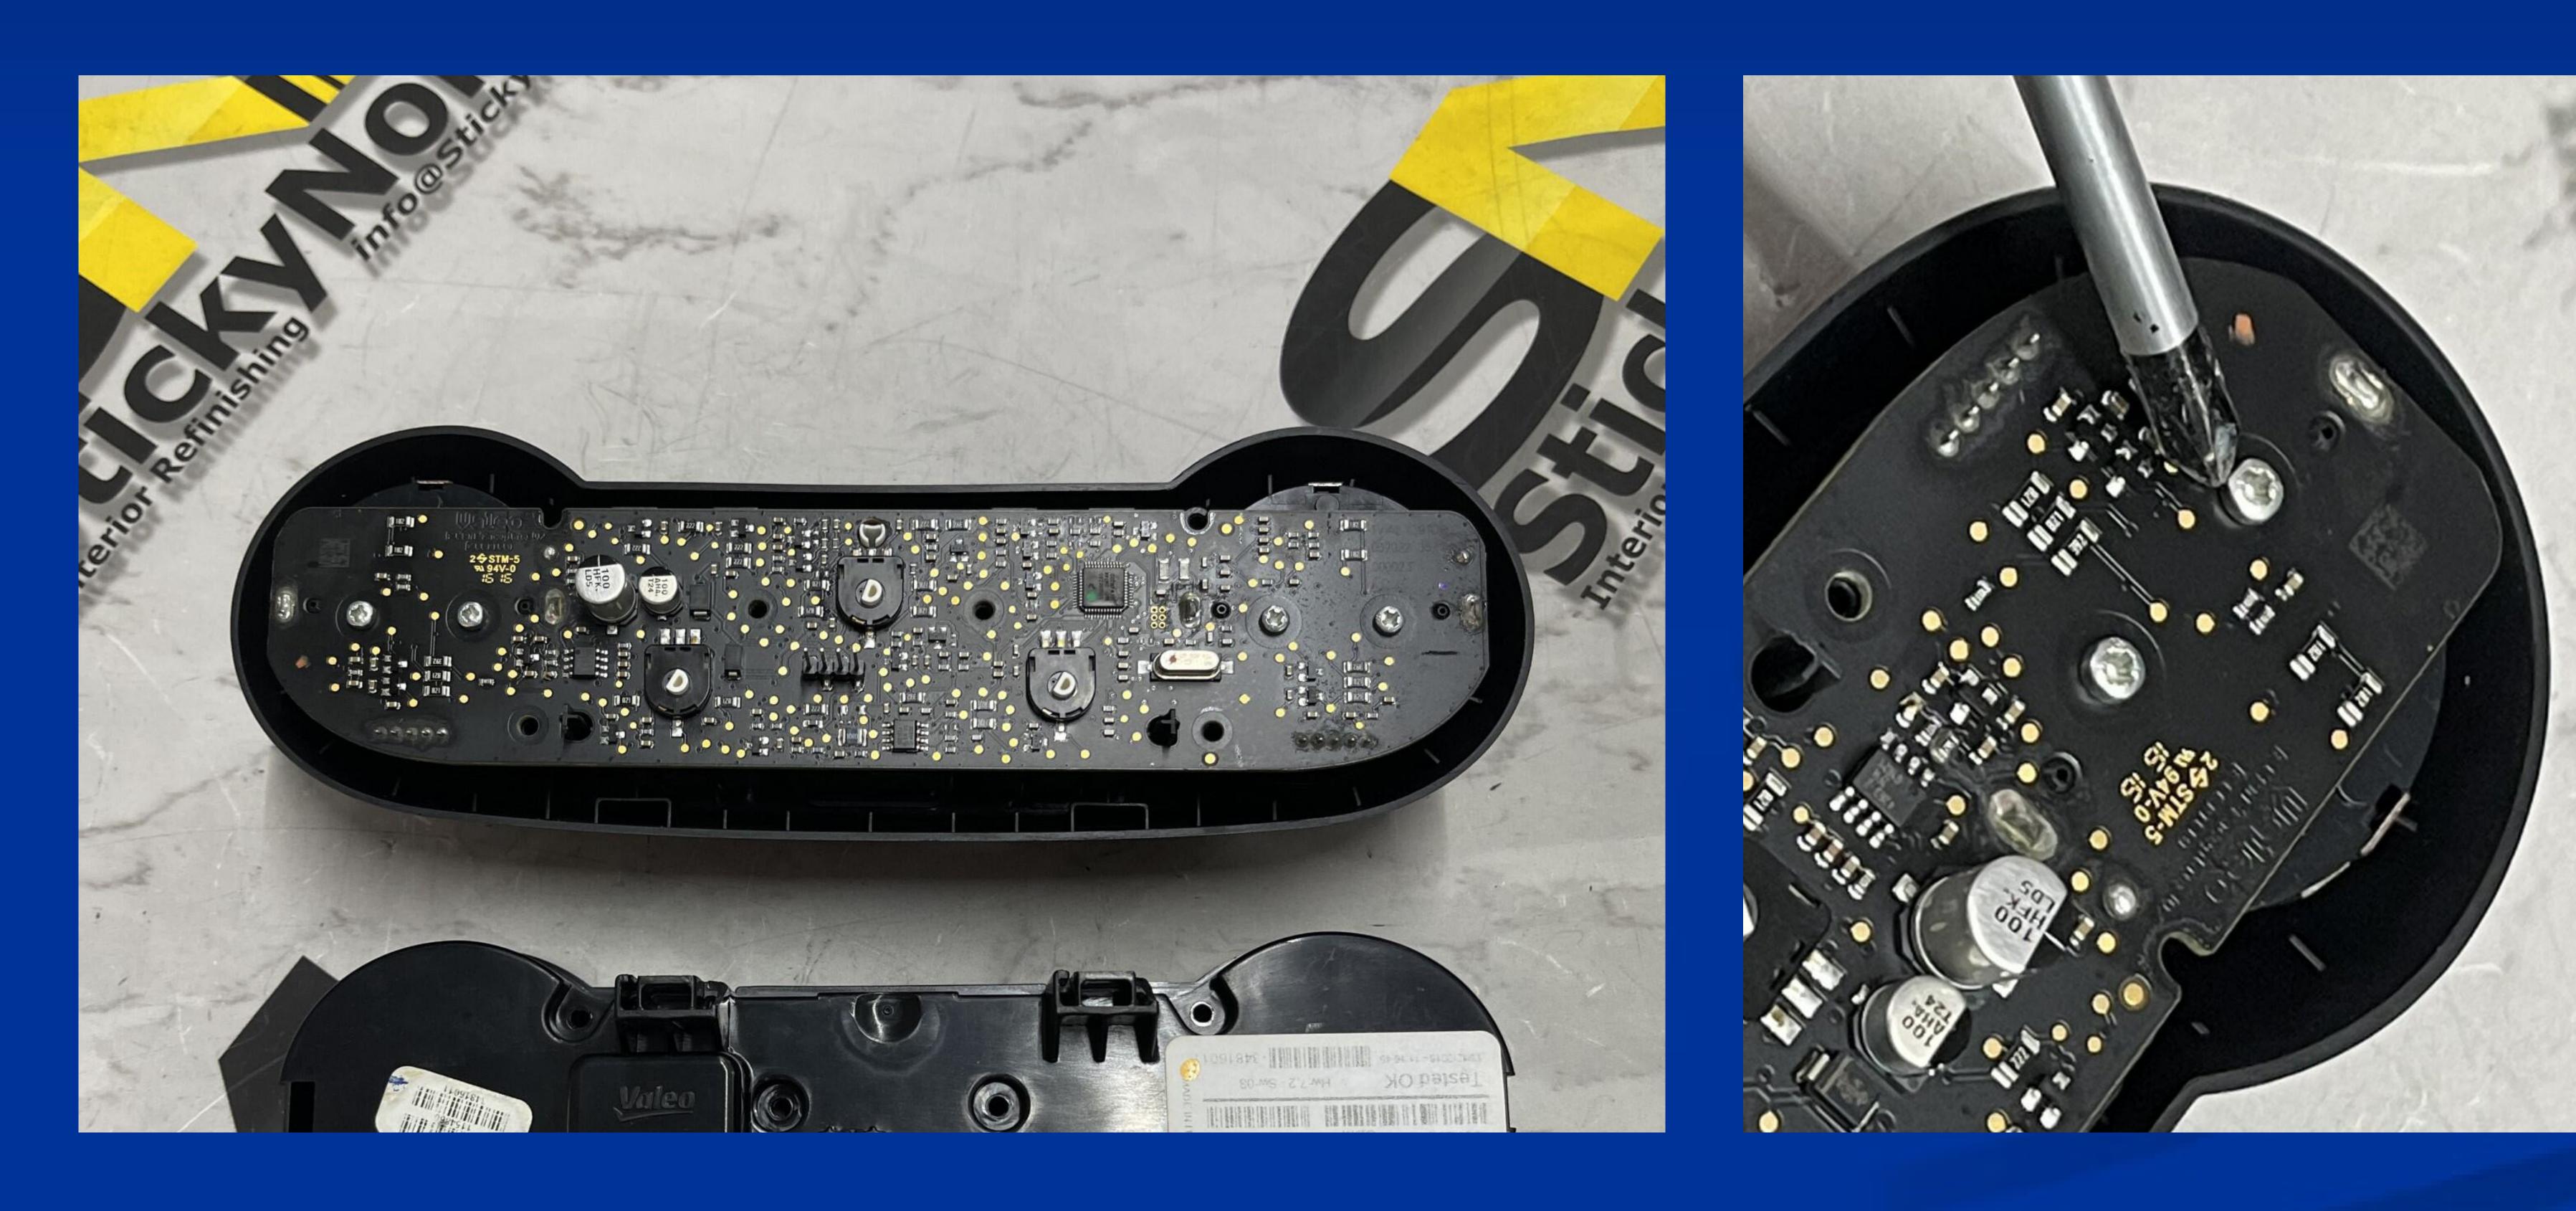

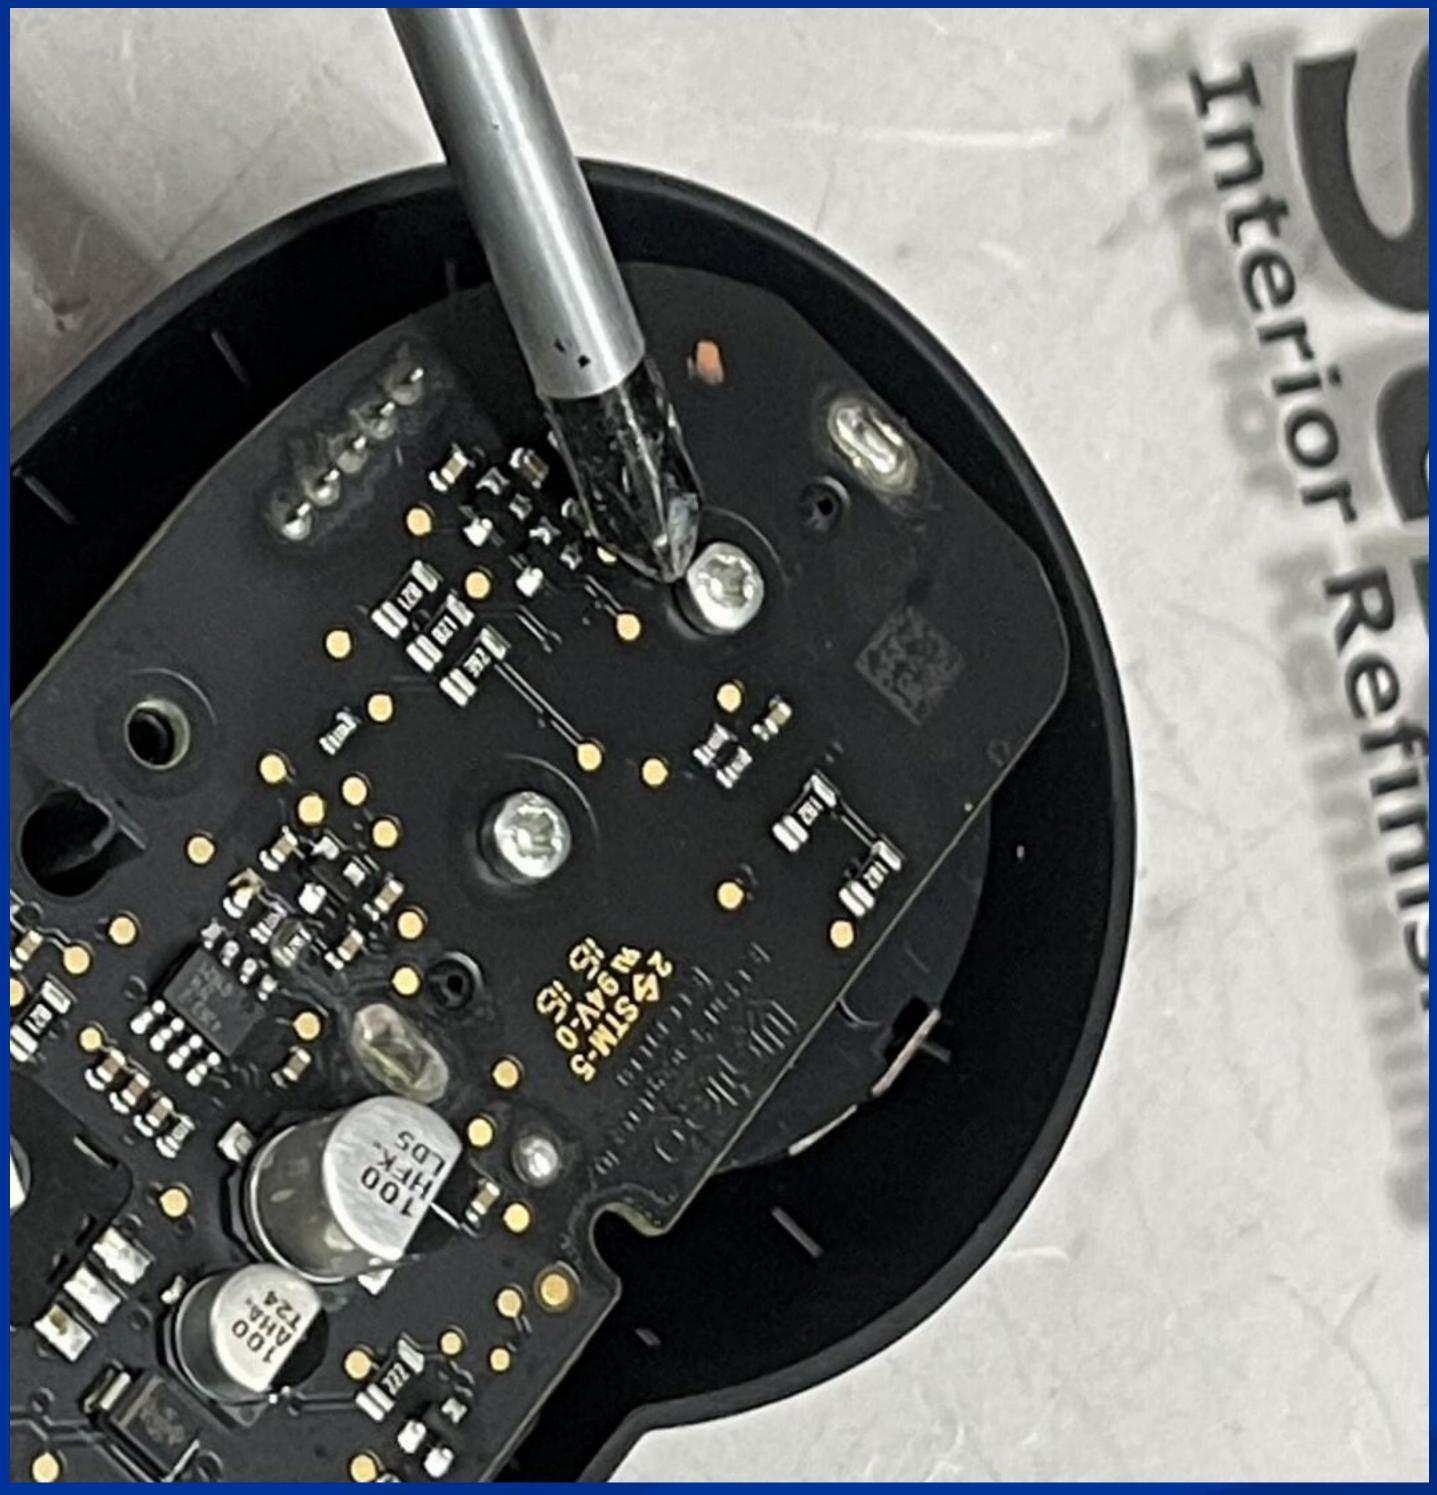

☐ Upon removal of the screws, the main two temp button sleeves will pop out



□ GENTLY pry around the edge of the sleeve caps and pry them off





At this point, you should be able to very carefully pull out the electronics board



This is as far as you need to disassemble the panel



Good luck, be patient and if you have any questions please do not hesitate to call or email us. Thanks

www.StickyNoMore.com